



# Help Manual

## Motor Hall

The content of this information is subject to change without notice

1. Replace the midmotor.